
SimpleSCAN®

Box Contents

- 1. SimpleSCAN Portable Wand Scanner
- 2. Hard shell case
- 3. USB cable
- 4.3 AAA batteries
- 5. Pouch
- 6. Micro SD card

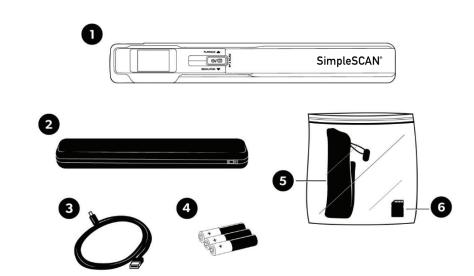

Download and Install Your Free SimpleSCAN Software

Visit http://simplescan.com/portable-wand-scanner/ and scroll to the bottom of the page.

Click to download the Portable Wand Scanner Software and follow the prompts for installation.

Ready to Start Scanning?

- Step 1. Follow the instructions detailed on the insert from your box to install your micro SD card, the AAA batteries, and turn on your scanner.
- Step 2. Find a hard, flat surface to place your document or photo on for scanning.
- Step 3. Position your scanner on top of your document or photo. Start on the left side or top of the document.
- Step 4. Press the SCAN button once, and move the scanner slowly along the document at a smooth, steady pace from one side to the other.
- Step 5. Press the SCAN button again to complete the scanning process.
- Step 6. When you have finished scanning, press and hold the Power button for 2 seconds to turn off the scanner and preserve battery power.

SimpleSCAN®

Ready to Access Your Scans?

- Step 1. Plug the USB cable into the port on the side of the scanner.
- Step 2. Connect the other end of the cable to an unused USB port on your computer.
- Step 3. If scanner is not powered on, press the Power button for 2 seconds to turn on the scanner.
- Step 4. Open SimpleSCAN Software on your computer.
- Step 5. Navigate to the Wand tab in SimpleSCAN Software to access your scans.
- Step 6. To save an image, click on the image to select it and hit Save. You can select multiple images by dragging a box or holding shift while selecting images.

Note: If saving in PDF, Searchable PDF, Word or Excel format, images will merge into a single file. If saving in JPEG or TIFF format, images will save individually.

Thank You for Choosing SimpleSCAN

For more details, download the complete user guide at http://simplescan.com/portable-wand-scanner/

Need help? You can reach our support team at http://simplescan.com/contact-us/